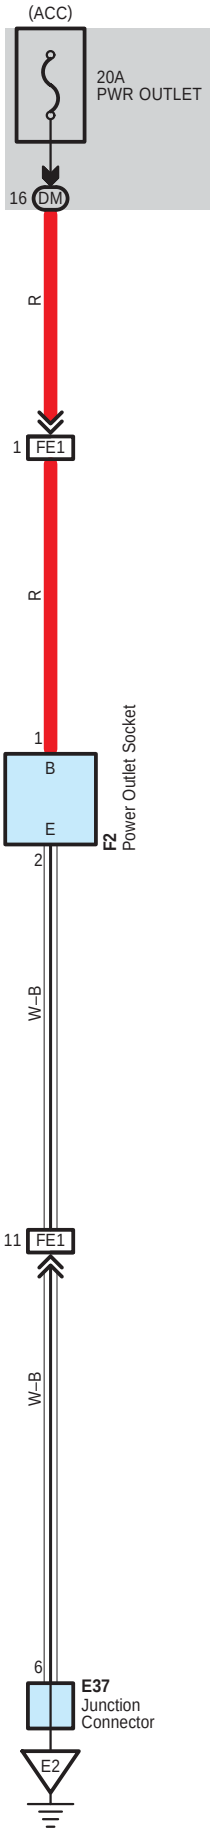
(ACC)
20A
PWR OUTLET
16 DM
R
1 FE1
R
1
B
E
F2
Power Outlet Socket
2
W–B
11 FE1
W–B
6
E37
Junction
Connector
E2

: Parts Location

Code	See Page	Code	See Page	Code	See Page
E37	58	F2	61		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
DM	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
FE1	69	Instrument Panel No.2 Wire and Instrument Panel Wire (Under the Console Box)

: Ground Points

Code	See Page	Ground Points Location
E2	69	Instrument Panel Brace LH